

Interesting facts about the use of SIMAX glassware

-  Please wash all items before the first use.
-  Temperature changes - which are not shock-like (i. e. not directly from the freezer into the hot oven) - cannot affect SIMAX products. When using the product, please handle it with care; pressure, impact or extreme temperature fluctuations may cause the product to break.
-  Cooling and freezing down to -40°C are no problem. However, they are not suitable for freezing liquids in them, because the glassware may break as they expand.
-  Do not place empty dishes onto heat sources and do not place the hot glassware onto cold or wet surfaces.
-  Please use usual washing-up liquids for the cleaning, no raw cleaning materials like sand or steel-wool.
-  Keep the glassware containing hot liquid out of the reach of children.
-  Please heat the glassware constantly and always with content. Never pour on cold fluid during cooking.
-  Glassware and accessoires can get hot! The items for hot frinks should always, be held by the handle only, if possible. We recommend using cloth or table napkin for handling glassware without handle and accessoires. For cooking, baking, roasting please use oven cloth.
-  Please use the items only with food and don't store chemicals or the like in it.
-  Glassware with a corresponding symbol on the sales packaging can be used on electric, gas or ceramic glass cooktops if the bottom of the glassware is smaller than or the same size as the cooking zone. A heat diffuser must be used for gas stoves. Please also read the instructions in the use manual of your oven, electric, gas or ceramic glass cooktops.
-  Glassware with a corresponding symbol on the sales packaging can be used in the microwave oven. Do NOT use stainless steel accessories, such as tea infusers, in the microwave oven. Please also read the instructions in the use manual of your microwave oven.
-  Natural materials such as wood, cork or bamboo should not be washed in the dishwasher. The surfaces are damaged by the high temperatures (from 55°C), the material can swell or become stained. Clean therefore natural materials only with lukewarm water without washing-up liquids.
-  There are some dishes with a suitable plastic lid. Therewith you can keep food and provisions in the refrigerator or freezer. Please remove the lid before cooking or heating on an electric plate, in the oven or in the microwave. Also the items with a glass lid can be kept in the refrigerator or freezer.
-  For pots with a plastic handle, please note, that the diameter of the heat source must be neither smaller nor larger than the diameter of the glass bottom. Should the diameter be larger, the plastic handle may become damaged.
-  If the glassware shows damage such as cracks or chipped spots, the item must no longer be used, because it may otherwise break completely. Damaged accessories must no longer be used either.

SIMAX®